

INSTALLATION

- (EN) Place Murfor® Compact on the blocks
- (NL) Plaats Murfor® Compact op de blokken
- (FR) Placer Murfor® Compact sur les blocs
- (DE) Platzieren Sie Murfor® Compact direkt auf dem Mauerwerk
- (ES) Posicione Murfor® Compact encima de los bloques
- (IT) Posare il Murfor® Compact sui blocchi
- (PVC) Разместите Murfor® Compact на блоках



- (EN) Apply a layer mortar
- (NL) Breng een laag mortel aan
- (FR) Appliquer une couche de mortier
- (DE) Eine Mörtelschicht aufbringen
- (ES) Aplique una capa de mortero
- (IT) Stendere uno strato sottile di malta
- (PVC) Нанесите тонкий слой раствора




- (EN) Place blocks
- (NL) Plaats blokken
- (FR) Placer les blocs
- (DE) Nächste Reihe Steine aufsetzen
- (ES) Posicione los bloques
- (IT) Posare i blocchi
- (PVC) Разместите блоки



- (EN) Safety
- (NL) Veiligheid
- (FR) Sécurité
- (DE) Sicherheit
- (ES) Seguridad
- (IT) Dispositivi protezione individuale (DPI)
- (PVC) Безопасность




- Ⓝ Use Murfor® Compact I-50 with a wall width of ≤ 130 mm.
- Ⓝ Gebruik Murfor® Compact I-50 bij een muurwijdte van ≤ 130 mm.
- Ⓝ Utilisez Murfor® Compact I-50 avec une largeur de paroi de ≤ 130 mm.
- Ⓝ Murfor® Compact I-50 für Mauerwerksbreiten ≤ 130 mm.
- Ⓝ Coloque Murfor® Compact I-50 con un espesor de pared de ≤ 130 mm.
- Ⓝ Utilizzare Murfor® Compact I-50 per muri con larghezza di ≤ 130 mm.
- Ⓝ Используйте Murfor® Compact I-50 если толщина стены ≤ 130 мм.

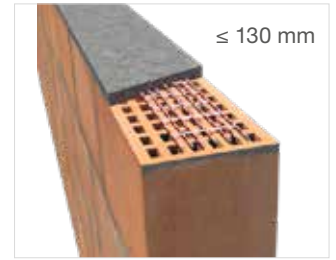


Murfor® Compact I-50

- Ⓝ Use Murfor® Compact I-100 with a wall width of > 130 mm < 200 mm.
- Ⓝ Gebruik Murfor® Compact I-100 bij een muurwijdte van > 130 mm < 200 mm.
- Ⓝ Utilisez Murfor® Compact I-100 avec une largeur de paroi > 130 mm < 200 mm.
- Ⓝ Murfor® Compact I-100 für Mauerwerksbreiten > 130 mm < 200 mm.
- Ⓝ Coloque Murfor® Compact I-100 con un espesor de pared > 130 mm < 200 mm.
- Ⓝ Utilizzare Murfor® Compact I-100 per muri con larghezza > 130 mm < 200 mm.
- Ⓝ Используйте Murfor® Compact I-100 если толщина стены > 130 мм < 200 мм.

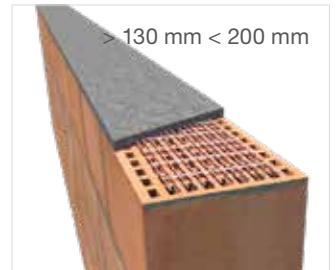


Murfor® Compact I-100

- Ⓝ Use 2x Murfor® Compact I-50 with a wall width of ≥ 200 mm.
- Ⓝ Gebruik 2x Murfor® Compact I-50 bij een muurwijdte van ≥ 200 mm.
- Ⓝ Utilisez 2x Murfor® Compact I-50 avec une largeur de paroi ≥ 200 mm.
- Ⓝ 2x Murfor® Compact I-50 für Mauerwerksbreiten ≥ 200 mm.
- Ⓝ Coloque 2x Murfor® Compact I-50 con un espesor de pared ≥ 200 mm.
- Ⓝ Utilizzare 2x Murfor® Compact I-50 per muri con larghezza ≥ 200 mm.
- Ⓝ Используйте 2x Murfor® Compact I-50 если толщина стены ≥ 200 мм.

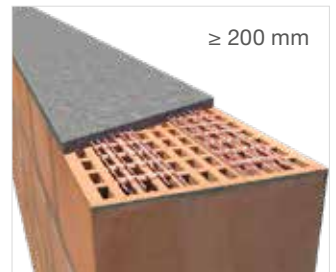


2x Murfor® Compact I-50

- Ⓝ Use a minimum overlap of 500 mm.
- Ⓝ Gebruik een minimum overlaplengte van 500 mm.
- Ⓝ Utilisez un chevauchement minimum de 500 mm.
- Ⓝ Überlappung mindestens 500 mm.
- Ⓝ Colocas un solape mínimo de 500 mm.
- Ⓝ Effettuare una sovrapposizione di almeno 500 mm.
- Ⓝ Минимальный нахлест 500 мм.

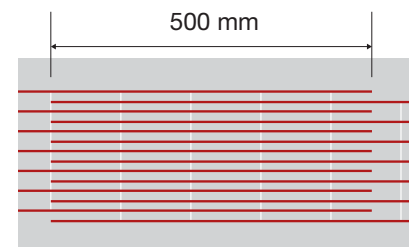

- Ⓝ Avoid positioning overlaps in the same vertical plane.
- Ⓝ Vermijd positionering van overlappingsen in hetzelfde verticale vlak.
- Ⓝ Évitez de placer des chevauchements dans le même plan vertical.
- Ⓝ Vertikal übereinander verlaufende Überlappungen sind nicht zulässig.
- Ⓝ Evite solapes en el mismo plano vertical.
- Ⓝ Evitare la sovrapposizione nello stesso piano verticale.
- Ⓝ Следует избегать нахлеста материала на одной вертикали.

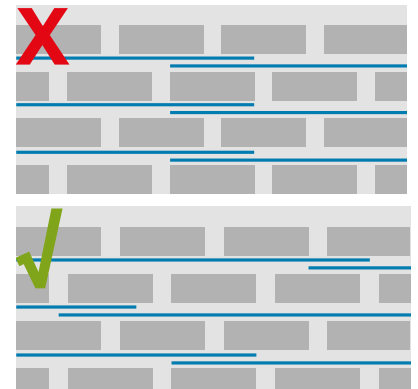

Contact us

More
Information?

infobuilding@bekaert.com
<https://www.bekaert.com/murfor-compact/en>

Modifications reserved
 All details describe our products in general form only.
 For ordering and design only use official specifications
 and documents. Unless otherwise indicated,
 all trademarks mentioned in this brochure are
 registered trademarks of
 NV Bekaert SA or its subsidiaries. © Bekaert 2017

Responsible editor: Peter Mjoernell - November 2017